

Spare Parts Breakdown - Aspire MONET Dual Action Lift Recline Chair



CHP227540	
Aspire MONET Dual Action Lift Recline Chair	

No.	Item Code	Item Description
1	GSP511500	Headrest Assembly - Frame / Actuator - Aspire Monet Lift Recline Chair
1A	GSP511505	Actuator - Headrest - Aspire Monet Lift Recline Chair
2	GSP511510	Actuator - Lift / Legrest - Aspire Monet Lift Recline Chair
3	GSP511520	Base Frame - Aspire Monet Lift Recline Chair
4	GSP400648	Transformer ONLY - for Battery Backup - All Aspire Lift Recline Chair / ComfiMotion Care / LUX Beds
5	GSP400649	Battery ONLY - for Battery Backup - All Aspire Lift Recline Chair / ComfiMotion Care / LUX Beds
5	GSP510740	Transformer ONLY - for Aspire Signature 2 / ComfiMotion Care / Altitude / Monet Chair
6	GSP511550	Cable - for Mains Power Supply - Aspire Monet Lift Recline Chair
7	GSP511560	Mains Power Cord - Aspire Monet / Rembrandt Lift Recline Chair
8	GSP510570	Bracket - Aspire Lift Recline Chair DaVinci / Monet - for attachment backrest
9	GSP511580	Steel Seat Frame - Aspire Monet Lift Recline Chair
10	GSP511590	Brackets - Male Connector - Side Wing - Aspire Monet Lift Recline Chair
11	GSP511600	Brackets - Female Connector - Side Wing - Aspire Monet Lift Recline Chair
12	GSP511610	Hand Control - Aspire Monet Lift Recline Chair
13	GSP511620	Control Box - Aspire Monet Lift Recline Chair
14	GSP511630	Heat Pad - Aspire Monet Lift Recline Chair
15	GSP511615	Extension Cable - for LHS Hand Control - Aspire Monet Lift Recline Chair