

Spare Parts Breakdown - Aspire REMBRANDT Quattro Lift Recline Chair



CHP227550	
Aspire REMBRANDT Quattro Lift Recline Chair	

No.	Item Code	Item Description
1	GSP511640	Hand Control - Aspire Rembrandt Lift Recline Chair
2	GSP511650	Base Frame - Aspire Rembrandt Lift Recline Chair
3	GSP511660	Actuator - Lift - Aspire Rembrandt Lift Recline Chair
4	GSP511670	Actuator - Backrest - Aspire Rembrandt Lift Recline Chair
5	GSP511680	Cable - Y Extension Cord - Aspire Rembrandt Lift Recline Chair
6	GSP511560	Mains Power Cord - Aspire Monet / Rembrandt / Matisse Recline Chair
7	GSP511690	Side Panel Handset - Heat / Air - Aspire Rembrandt Lift Recline Chair
8	GSP511700	Control Box - Aspire Rembrandt Lift Recline Chair
9	GSP511710	Power Supply - Aspire Rembrandt Lift Recline Chair
10	GSP511720	Backup Battery - Aspire Rembrandt Lift Recline Chair
11	GSP511730	Brackets - Backrest - Aspire Rembrandt Lift Recline Chair
12	GSP511740	Headrest and Lumbar Assembly - Frame / Actuator - Aspire Rembrandt Lift Recline Chair
13	GSP511750	Cupholder - Aspire Rembrandt Lift Recline Chair
14	GSP511760	Heat Pad - Aspire Rembrandt Lift Recline Chair
15	GSP511770	Wireless Charging Pad - Aspire Rembrandt Lift Recline Chair
16	GSP511780	Air Bladder Pump Assembly - Aspire Rembrandt Lift Recline Chair
17	GSP511790	Air Bladder - Red Label - Aspire Rembrandt Lift Recline Chair
18	GSP511800	Air Bladder - Green Label - Aspire Rembrandt Lift Recline Chair
19	GSP511810	Air Bladder - Yellow Label - Aspire Rembrandt Lift Recline Chair
20	GSP511820	Actuator - Tilt - Aspire Rembrandt Lift Recline Chair
21	GSP511830	Actuator - Headrest - Aspire Rembrandt Lift Recline Chair
22	GSP511840	Actuator - Lumbar - Aspire Rembrandt Lift Recline Chair
23	GSP511842	Cover - Plastic - for Control Panel - Aspire Rembrandt Lift Recline Chair